

HERITAGE CHRONOGRAPH



DETOMASO

GRATULATION ZUM ERWERB DEINER DETOMASO UHR!

Du bist jetzt Eigentümer eines Zeitgebers, der sich durch hervorragende Qualität, hohe Präzision und außergewöhnliches Design auszeichnet. DETOMASO Uhren setzen ein Statement dafür, sein eigenes Tempo zu finden und sich von den Zwängen der Zeit freizumachen. Eben LIVE THE MOMENTUM.

Damit wir gewährleisten können, dass deine neue Uhr viele Jahre problemlos funktioniert, lies bitte sorgfältig die folgende Bedienungsanleitung. So erinnert dich deine DETOMASO Uhr stets daran, deinen ganz eigenen Takt zu finden: LIVE THE MOMENTUM.

MATERIALIEN

Erst das Zusammenspiel von mutigen Ideengebern, erstklassigen Uhrmachern und ambitionierten Designern haben aus der Idee hinter DETOMASO Präzisionsarbeit werden lassen. Und diese Ambitionen spiegeln sich auch in den ausgesuchten Materialien wider.

DETOMASO verwendet nur beste Komponenten für den HERITAGE CHRONOGRAPH:


Japanisches Quarz Markenuhrwerk von Seiko Kaliber VD54 mit Stoppfunktion

Gehäusematerial aus antiallergenem 316L Chirurgienstahl

Kaltgeschliffenes, saphirgehärtetes Mineralglas mit Doppelwölbung

5 ATM Wasserdichtigkeit nach DIN 8310

LIVE THE MOMENTUM

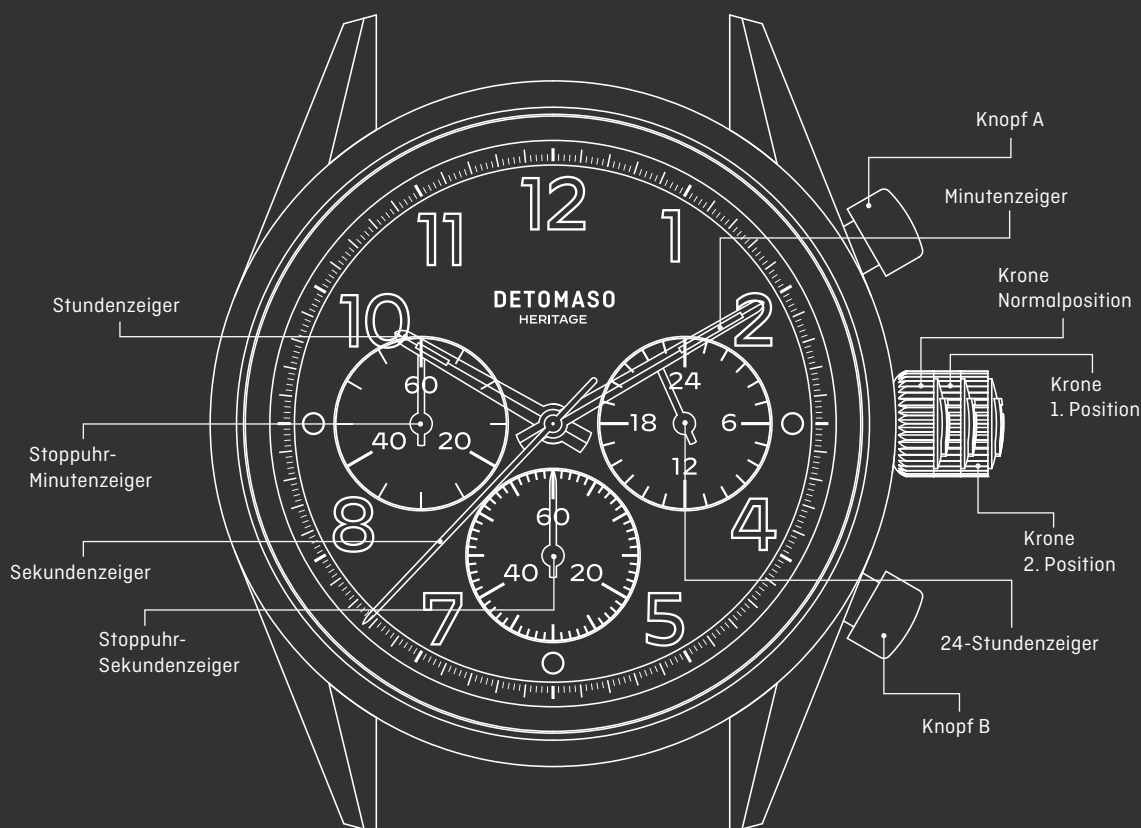

PFLEGEHINWEISE

Deine Uhr soll dir viel Freude bereiten und dich lange begleiten. Schütze deine Uhr vor Stößen, Magnetfeldern, starker Hitze und Chemikalien sowie vor mechanischem Abrieb. Mit einer Wasserdichtigkeit von 5 ATM hält deine Uhr Regen, Händewaschen und Duschen aus. Versuche aber dennoch sie selten Wasser auszusetzen, auch dem Armband zuliebe. Beim Tragen sollte die Krone immer in eingedrückter Position sein.

Muss die Batterie gewechselt werden, kannst du gerne von unserem Wartungsangebot Gebrauch machen und deine Uhr in unsere Uhrmacherwerksatt einsenden (Kontakt: service@detomaso-watches.com). Du kannst deine Batterie aber auch im Fachgeschäft austauschen lassen.

Solltest du Kondenswasser unter dem Glas sehen, muss die Uhr unverzüglich in unsere Uhrmacherwerkstatt gesendet oder ins Fachgeschäft gebracht werden, damit die Feuchtigkeit keinen Schaden anrichtet.

EINSTELLUNG DER UHRZEIT

Ziehe die Krone heraus, sobald sich der Sekundenzeiger auf 12 Uhr befindet.

Drehe die Krone im Uhrzeigersinn, um die Stunden- und Minutenzeiger zu bewegen.

Drücke anschließend die Krone wieder in die Normalposition.

NUTZUNG DER STOPP-FUNKTION

Drücke Knopf A um den Chronographen zu starten.

Drücke Knopf A erneut, um den Chronographen zu stoppen oder erneut zu starten.

Drücke Knopf B, um den Chronographen auf "Null" zurückzustellen.

RESET DES CHRONOGRAPHEN

Du solltest ein Reset ausführen, wenn der Sekundenzeiger des Chronographen nicht auf die Nullposition zurückkehrt. Dies kann vorkommen, wenn der Chronograph zurückgestellt oder die Batterie ausgetauscht wurde.

Ziehe die Krone heraus, in die 2. Position.

Drücke Knopf A (die Zeiger bewegen sich entgegen dem Uhrzeigersinn) oder B (die Zeiger bewegen sich im Uhrzeigersinn), um den Sekunden- und Minutenzeiger der Stoppuhr auf die Position „0“ zurückzustellen. Stelle die Uhrzeit ein und drücke die Krone wieder in die Normalposition.

CONGRATULATIONS ON YOUR NEW DETOMASO WATCH!

You are now the owner of a watch that stands out for its premium quality, high precision, and innovative design. DETOMASO watches are a statement about finding your own pace, to free yourself from the constraints of time. In short, to LIVE THE MOMENTUM.

To ensure that we can guarantee the functionality of your watch for many years, please read the following operating instructions carefully. Your DETOMASO watch is a continuous reminder that you create your own path in life – LIVE THE MOMENTUM.

MATERIALS

DETOMASO started as an ambitious idea between a visionary designer and a world-class watchmaker, but has quickly transitioned to a precision timepiece. And these ambitions are reflected in the selected materials.

DETOMASO uses only the best components for the HERITAGE CHRONOGRAPH:

Movement: Seiko Japanese Quartz Caliber VD54 Chronograph with date

Case material: Anti-allergenic 316L surgical steel

Glass: Cold ground sapphire-coated mineral glass with double curvature


Water resistance: 5 ATM/50M/150FT

CARE INSTRUCTIONS

Your watch should accompany you for a long time. Protect your watch from shocks, magnetic fields, strong heat and chemicals, as well as mechanical abrasion. With a water resistance of 5 ATM, your watch can stand rain, washing hands and taking a shower. However, try to avoid too much water contact, also for the sake of the bracelet. The crown should always be in the depressed position when being worn.

If your watch stops, you should first change the battery. This can be done by our watchmaker (contact: service@detomaso-watches.com) or in any jewelry shop.

In the event of condensation under the glass, the watch should immediately be sent to the DETOMASO watchmaker, or taken to a specialist shop in order to prevent damage from the moisture.

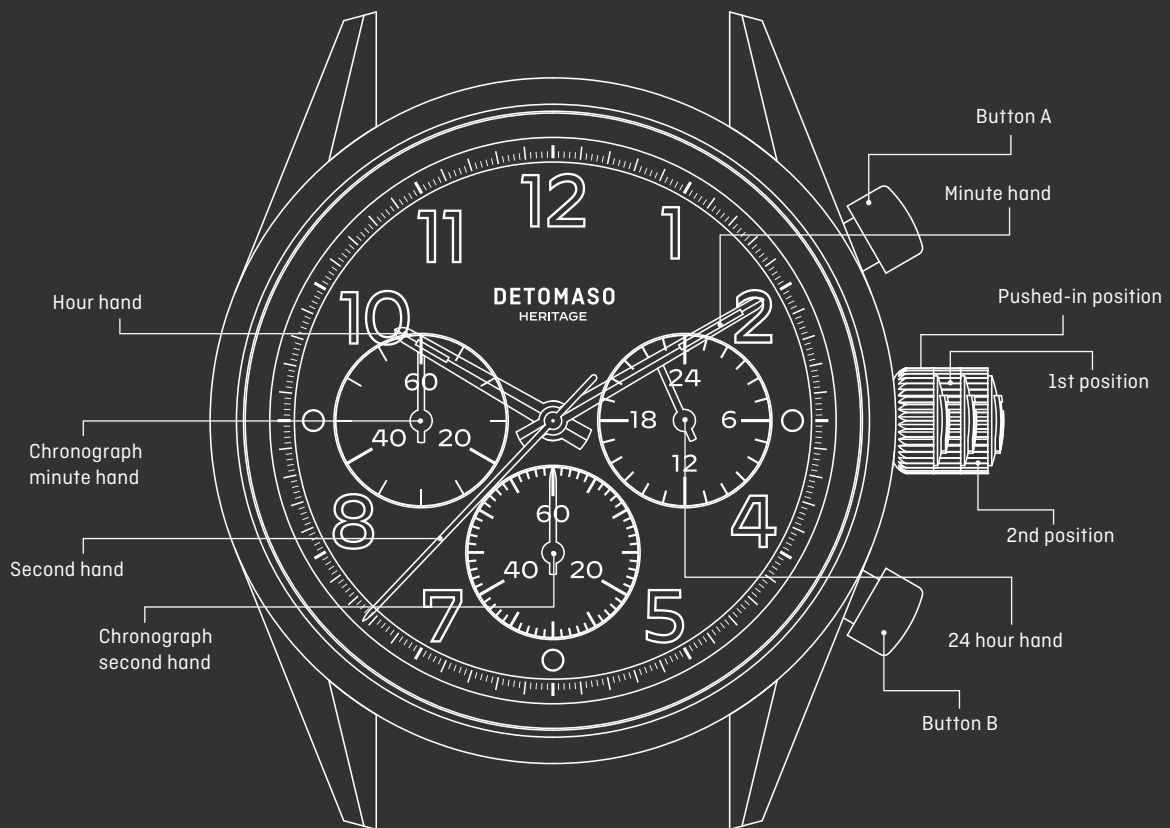

SETTING THE TIME

Pull out the crown when the second hand is at 12 o'clock.

Turn the crown clockwise to move the hour and minute hands.

Then push the crown back to the pushed-in position.

USING THE STOP FUNCTION

Before using the stop function, make sure that the crown is in the normal position and the chronograph hands are at "zero" position.

Press button A to start the chronograph and to stop it again. Pressing button A again will add the time.

Press button B to reset the chronograph minute and second hands to "zero".

RESET THE CHRONOGRAPH

This procedure should be performed when the chronograph second hand does not return to the "zero" position. This may happen if the battery is replaced. Pull out the crown to the 2nd position.

Press button A (the hands move counter-clockwise) or B (the hands move clockwise) to reset the stopwatch second and minute hands to the "0" position.

Once the hands are set at "zero" position, set the time and return the crown to its normal position.

DETOMASO CUSTOMER SERVICE:

DETOMASO
c/o Temporex Lifestyle GmbH
Hinsbecker Löh 10
45257 Essen / Germany
EU: +4920121991968
UK: +441603976950
service@detomaso-watches.com
www.detomaso-watches.com

Clients from the US please contact:

DETOMASO
c/o Zeitgeist Inc.
3600 Horizon Drive
Suite 110
King of Prussia, PA 19406 USA
service@detomasowatches.com
(215) 999-4010
www.detomasowatches.com

