

AVIATORE AUTOMATIC GMT



DETOMASO

GRATULATION ZUM ERWERB DEINER DETOMASO UHR!

Du bist jetzt Eigentümer eines Zeitgebers, der sich durch hervorragende Qualität, hohe Präzision und außergewöhnliches Design auszeichnet. DETOMASO Uhren setzen ein Statement dafür, sein eigenes Tempo zu finden und sich von den Zwängen der Zeit freizumachen. Eben LIVE THE MOMENTUM.

Damit wir gewährleisten können, dass deine neue Uhr viele Jahre problemlos funktioniert, lies bitte sorgfältig die folgende Bedienungsanleitung. So erinnert dich deine DETOMASO Uhr stets daran, deinen ganz eigenen Takt zu finden: LIVE THE MOMENTUM.

MATERIALIEN

Erst das Zusammenspiel von mutigen Ideengebern, erstklassigen Uhrmachern und ambitionierten Designern haben aus der Idee hinter DETOMASO Präzisionsarbeit werden lassen. Und diese Ambitionen spiegeln sich auch in den ausgesuchten Materialien wider.

DETOMASO verwendet nur beste Komponenten für die AVIATORE AUTOMATIC GMT:


Automatikuhrwerk des japanischen Traditionsherstellers Seiko Kaliber NH34

Gehäusematerial aus antiallergenem 316L Chirurgenstahl

Doppelt gewölbtes Saphirglas mit Anti-Reflex-Beschichtung

5 ATM Wasserdichtigkeit nach DIN 8310

LIVE THE MOMENTUM

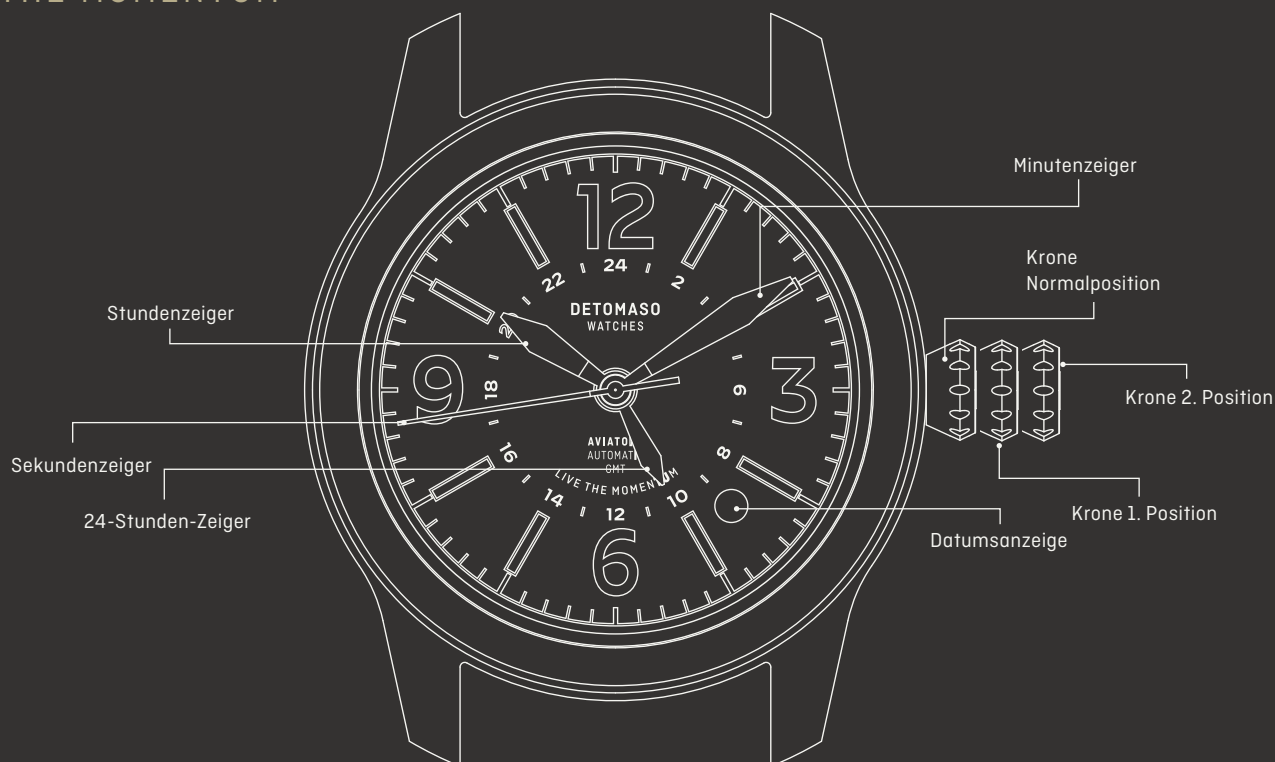

PFLEGEHINWEISE

Deine Uhr soll dir viel Freude bereiten und dich lange begleiten. Schütze deine Uhr vor Stößen, Magnetfeldern, starker Hitze und Chemikalien sowie vor mechanischem Abrieb. Mit einer Wasserdichtigkeit von 5 ATM hält sie Wasserspritzer aus und du brauchst sie beim Händewaschen nicht abnehmen. Versuche aber dennoch sie selten Wasser auszusetzen, auch dem Armband zuliebe. Beim Tragen sollte die Krone immer in eingedrückter Position sein.

Solltest du Kondenswasser unter dem Glas sehen, muss die Uhr unverzüglich in unsere Uhrmacherwerkstatt gesendet oder ins Fachgeschäft gebracht werden, damit die Feuchtigkeit keinen Schaden anrichtet.

Eine geringe Gangabweichung für Automatikuhren ist normal. Nach 5 bis 7 Jahren kann es jedoch sein, dass das Uhrwerk an Präzision verliert und zur Revision muss. Die Revision kann in unserer Uhrenwerkstatt durchgeführt werden (Kontakt: service@detomaso-watches.com) oder aber in einem Fachgeschäft.

AUFZIEHEN DER UHR

Deine neue Automatikuhr hat einen manuellen Aufzugsmechanismus. Beim Tragen der Uhr wird die Aufzugsfeder durch die Armbewegung automatisch aufgezogen.

Die Gangreserve beträgt 41 Stunden. So lange läuft deine Uhr, wenn sie liegt und nicht getragen wird.

Du kannst deine Uhr auch per Hand aufziehen. Die Krone bleibt hierfür in Normalposition. Drehe die Krone langsam im Uhrzeigersinn. So lässt sich die Uhr vollständig aufziehen. Die Feder wird durch weiteres Drehen der Krone nicht beschädigt.

Drehe die Krone von Zeit zu Zeit auch bei regelmäßigem Tragen, um Korrosion zu vermeiden.

EINSTELLUNG DES DATUMS UND DER UHRZEIT

Achte darauf, dass deine Uhr läuft. Wenn nicht, ziehe sie wie oben beschrieben auf.

Ziehe die Krone heraus, in die 1. Position.

Drehe die Krone gegen den Uhrzeigersinn, um das Datum vom Vortag einzustellen. Durch Einstellen der Uhrzeit wird dann das richtige angezeigt. Das Datum sollte nicht zwischen 21 und 3 Uhr gestellt werden, da das Datum

ansonsten nicht einwandfrei weiterrückt. Bitte beachte, dass das Datum am ersten Tag nach Monaten mit weniger als 31 Tagen einzustellen ist.

Ziehe dann die Krone weiter heraus, in die 2. Position, und stelle die Uhrzeit bzw. das heutige Datum ein.

Drücke anschließend die Krone wieder in die Normalposition.

EINSTELLUNG UND VERWENDUNG DES 24-STUNDEN-ZEIGERS

Ziehe die Krone heraus, in die 1. Position.

Drehe die Krone im Uhrzeigersinn, um den 24-Stunden-Zeiger zu verstellen. Du kannst dir mit dem 24-Stunden-Zeiger die Nachmittagszeit (PM) anzeigen lassen, wenn deine Uhr die Vormittagszeit (AM) anzeigt.

Du kannst den 24-Stunden-Zeiger aber auch nutzen, um dir die Zeit einer anderen Zeitzone anzeigen zu lassen. Ein Beispiel: In deiner Zeitzone ist es 8 Uhr. Du möchtest eine Zeitzone verfolgen, die 9 Stunden vor der Zeit an deinem Standort ist. Dann stellst du deinen 24 Stundenzeiger auf 17 Uhr.

Drücke die Krone wieder in die Normalposition.

CONGRATULATIONS ON YOUR NEW DETOMASO WATCH!

You are now the owner of a watch that stands out for its premium quality, high precision, and innovative design. DETOMASO watches are a statement about finding your own pace, to free yourself from the constraints of time. In short, to LIVE THE MOMENTUM.

To ensure that we can guarantee the functionality of your watch for many years, please read the following operating instructions carefully. Your DETOMASO watch is a continuous reminder that you create your own path in life – LIVE THE MOMENTUM.

MATERIALS

DETOMASO started as an ambitious idea between a visionary designer and a world-class watchmaker, but has quickly transitioned to a precision timepiece. And these ambitions are reflected in the selected materials.

DETOMASO uses only the best components for the AVIATORE AUTOMATIC GMT:

Automatic movement from the Japanese tradition, Seiko Caliber NH34

Case material made of hypoallergenic 316L surgical steel


Double-curved sapphire crystal with anti-reflective coating

5 ATM water resistance according to DIN 8310

CARE INSTRUCTIONS

Your watch is meant to bring you joy and accompany you for a long time. Protect your watch from shocks, magnetic fields, strong heat, chemicals, and mechanical abrasion. With a water resistance of 5 ATM, it can withstand splashes of water, so you don't need to take it off when washing your hands. However, try to avoid exposing it to water too often, for the sake of the bracelet. The crown should always be in the pushed-in position while wearing it.

If you notice condensation under the glass, immediately send the watch to our watchmaker's workshop or take it to a specialist store to prevent moisture from causing damage. A slight time deviation in automatic watches is normal. However, after 5 to 7 years, the movement may lose precision and require servicing. The servicing can be done at our watch workshop (contact: service@detomaso-watches.com) or at a specialist store.

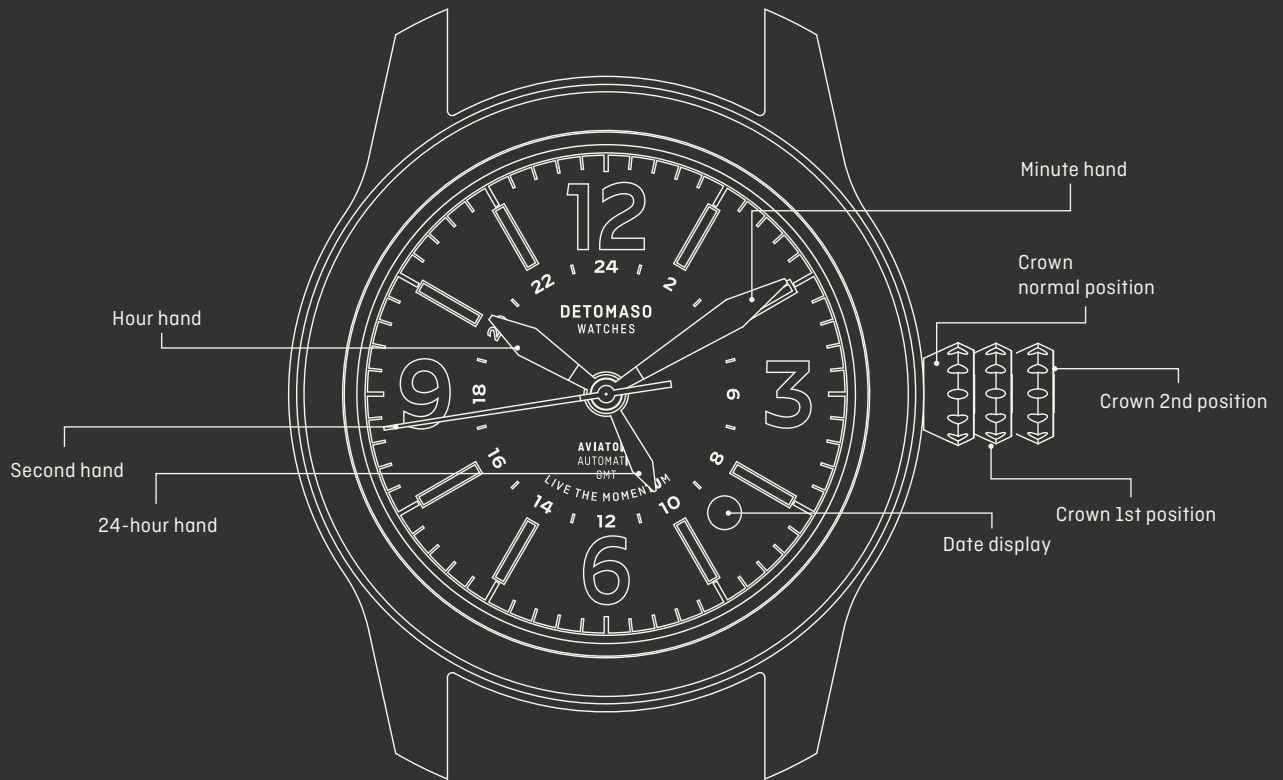

WINDING THE WATCH

Your new automatic watch has a manual winding mechanism. When wearing the watch, the mainspring is automatically wound by the motion of your wrist.

The power reserve is 41 hours. That's how long your watch will run when it's not being worn.

You can also manually wind your watch. The crown should be in the normal position for this. Slowly turn the crown clockwise to fully wind the watch. Further turning of the crown will not damage the mainspring.

Rotate the crown from time to time even with regular wear to avoid corrosion.

SETTING THE DATE AND TIME

Ensure your watch is running. If not, wind it as described above.

Pull the crown out to the 1st position.

Turn the crown counterclockwise to set the date to the previous day. Adjusting the time will then display the correct date. Avoid

setting the date between 9 pm and 3 am, as it may not advance properly. Please note that you should set the date to the first day after months with less than 31 days.

Then pull the crown further out to the 2nd position and set the time or today's date.

Finally, push the crown back to the normal position.

SETTING AND USING THE 24-HOUR HAND

Pull the crown out to the 1st position.

Turn the crown clockwise to adjust the 24-hour hand. You can use the 24-hour hand to display the afternoon time (PM) when your watch shows the morning time (AM).

You can also use the 24-hour hand to track a different time zone. For example, if it's 8 AM in your time zone and you want to follow a time zone that is 9 hours ahead of your location, set your 24-hour hand to 5 PM.

Push the crown back to the normal position when you're done. Set the time and return the crown to its normal position.

DETOMASO CUSTOMER SERVICE:

DETOMASO
c/o Temporex Lifestyle GmbH
Hinsbecker Löh 10
45257 Essen / Germany
EU: +49 201 219919 68
UK: +44 160 3976950
DE: +49 201 219919 69
FR: +33 9730 53444
service@detomaso-watches.com
www.detomaso-watches.com

Clients from the US/CA please contact:

DETOMASO
c/o Zeitgeist Inc.
3600 Horizon Drive
Suite 110
King of Prussia, PA 19406 USA
service@detomasowatches.com
(215) 999-4010
www.detomasowatches.com

